

TOP\_CAP.pdf BOT\_CAP.pdf CAPAnnex.pdf

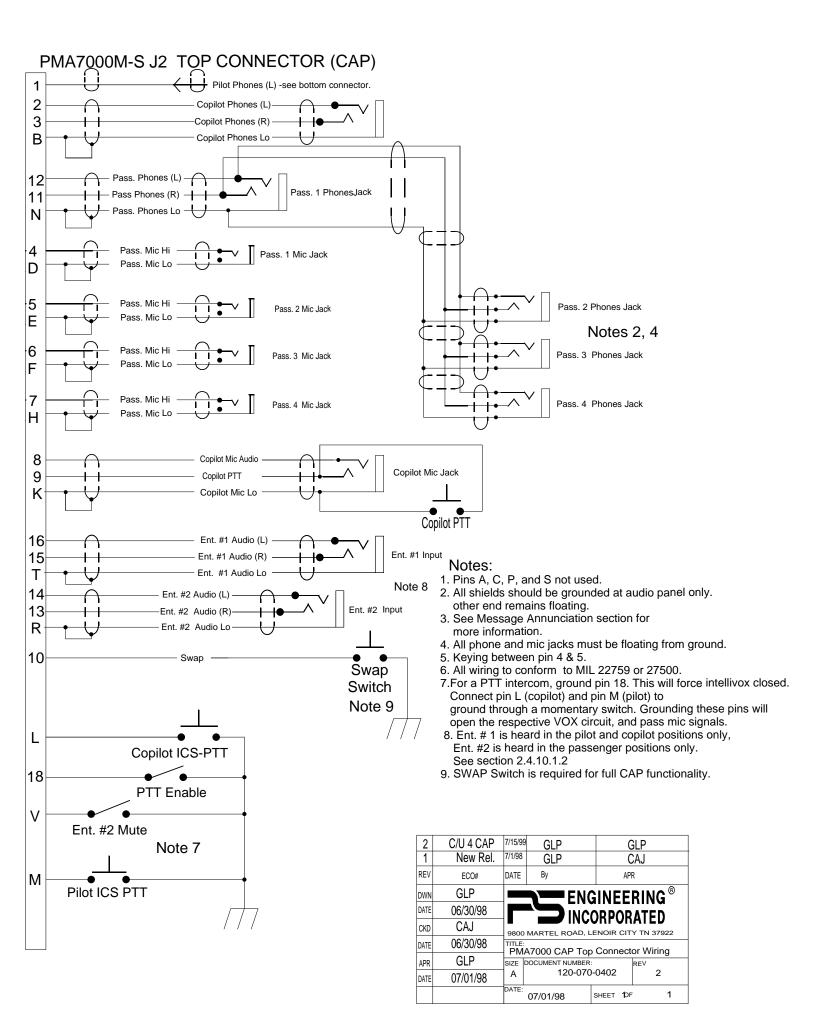

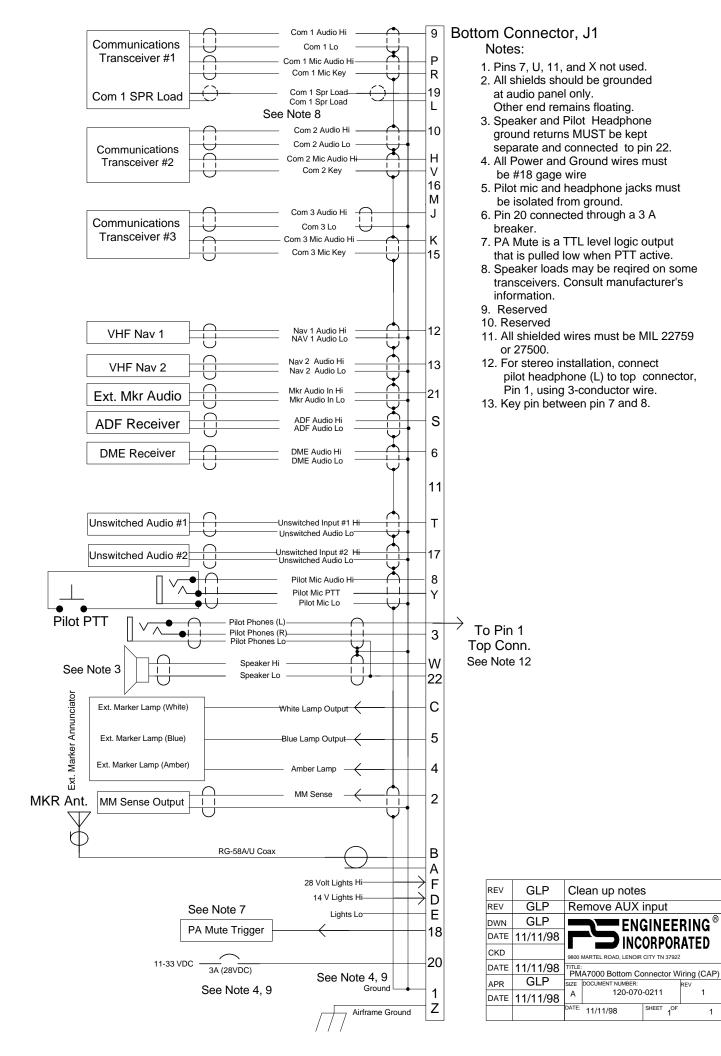

Record of REV:	revisions: ECO	:	Description		Approved:	
1	Leo		bassenger swap to parallel		Picou	
2		Correct Newar	k P/N on Mil Spec switch	l	Picou	
Annex A,						
PMA7000MS-CAP						
Installation Manual						
Second						
Document Number: 002-072-0920				Pa	ges: 3	
Written E	By: Gary F Date: 8	Picou //21/2000	Checked By: Date:	Ap	proved By: Date:	
	Duic. 0	21/2000	Duite.	l	Dute.	



#### **Purpose:**

The purpose of this document is to provide interconnect information to add a transmit position (observer) to share the COM 3 transceiver if necessary.

# Applicability

This applies only to PMA7000MS-CAP versions.

### **Components required**

K1 and K2-	Potter & Brumfield KHS-14D11-24
Diodes-	1N4004 (or Equiv.) (3 ea.)
Switch-	SPDT Momentary, Center off
	Mil-Spec = 11TW1-7
	Industrial = $11TS15-7$
	Standard = $7105SYZQE$

# Limitations

All wires must be Mil-Spec. Use 2-, 3- and 4- conductor wire with shield as indicated. Use insulating washers on all jacks to prevent ground loops. Connect shields at unit only.

This drawing is for reference only. PS Engineering, Inc. makes no guarantee that this interconnect will work in all cases.

# **Operational notes**

- 1. Pass 1 can only transmit on CAP radio.
- 2. Pilot and copilot can still hear CAP radio
- 3. Pilot and copilot can hear passenger transmit.
- 4. Pilot and copilot positions still have use of all 3 radios except when the Pass 1 is in ICS PTT.
- 5. Pass 1 push to talk puts him on CAP com only.
- 6. The crew can hear, but cannot transmit on COM 3 while the PASS 1 has radio keyed.
- 7. When the Pass 1 uses the ICS PTT, he overrides the copilot on the intercom.
  - a. When the PTT ICS is activated,
  - b. the copilot cannot transmit
  - c. This prevents the passenger's voice from going out instead of the copilot's.
  - d. If pass 1 does not push the ICS PTT switch, he will be heard on the passenger intercom, but NOT in crew intercom in CREW or Split modes.

