

910-004-0001
DRAWS Standard

Spoken Phrase
"Check temperature"
"Check temperature"
"Check fuel"
"Check oil"
"Check battery"
"Check engine speed"
"Check boost"

910-004-0004

"Check Generator"
"Check Generator"
"Canopy Unlocked"
"Check Fuel"
"Check GPS Message"
"GPS Way-point Alert"
"Check FADEC"

910-004-0005

"Check Generator"
"Check Generator"
"Engine Instruments"
"Check Fuel"
"Check GPS Message"
"GPS Way-point Alert"
"Service Magneto"

910-004-0007

"Check Minimums"
"Check Minimums"
"Check Fuel"
"Check Oil"
"Check Battery"
"Check Engine Speed"
"Check Boost"

910-004-0010

"Check Altitude"
"Check Altitude"
"Check Autopilot"
"Check Inverter"
"Check Fuel"
"Check Generator"
"Check Door"

910-004-0011

"Engine Fire Warning"
"Engine Fire Warning"
"Low Fuel Pressure Warning"
"Low Oil Pressure Warning"
"High Oil Temperature Warning"
"Generator Failure Warning"
"Hot ECS or Bleed Air Warning"

910-004-0012

"Check Instrument Vacuum"
"Check Instrument Vacuum"
"Check Oil Pressure"
"Baggage Door Unlocked"
"Check Bus Voltage"
"GPS Waypoint Arrival"
"Check Warning Lights"

910-004-0013

"Check GPS Message"
"Check GPS Message"
"GPS Waypoint Alert"
"Check Altitude"
"Check Warning Panel"
"Check Generator"
"Check Door"

910-004-0014

"Check Engine Speed"
"Check Engine Speed"
"Minimums, Minimums, Minimums"
"GPS Alert, GPS Alert, GPS Alert"
"GPS Message, GPS Message, GPS Message"
"Telephone, Telephone, Telephone"
"Check Boost"

910-004-0015

"Check GPS Message"
" Check GPS Message"
" Check Waypoint Alert "
"Check Instrument Vacuum"
"Check Warning Lights"
" Minimums "
"Engine Instruments"

910-004-0016

"Check Temperature"
"Check Temperature"
" Check Engine Speed "
"Check Altitude"
"GPS Waypoint Alert"
" Check Voltage "
"Check Warning Panel"

910-001-0019

Trim
Minimums
Check altitude
Check arrival procedures
.Auto pilot disengaged