



9800 Martel Road
Lenoir City, TN 37772

IntelliPAX Intercom Expansion Unit

Unit Part Numbers

11645R
for use with PAC45
Passenger Intercom System
With IntelliVox®

Installation and Operation Manual

US Patent No. 6,493,450

Document P/N 200-250-0045
February 2022

PS Engineering, Inc. 2022 ©
Copyright Notice

Any reproduction or retransmittal of this publication, or any portion thereof, without the expressed written permission of PS Engineering, Inc. is strictly prohibited. For further information contact the Publications Manager at PS Engineering, Inc., 9800 Martel Road, Lenoir City, TN 37772. Phone (865) 988-9800 www.ps-engineering.com

Section I – General Information

1.1 Introduction

The **IntelliPAX** is a panel mounted, multi-place intercom expansion unit used to add up to six extra stations to an intercom system. Please read this manual completely before installation to minimize the risk of damage to the unit and to become familiar with all the features.

1.2 Scope

This manual contains installation and operational instructions for the following PS Engineering units:

| <u>Model</u> | <u>Description</u> | <u>Part Number</u> |
|--------------------------|--|--------------------|
| IntelliPAX Remote | blind- mount intercom expansion unit for PAC45 | 11645R |

1.3 Description

The **IntelliPAX** (11645R) is a remote, or blind mounting intercom expansion unit with intercom volume control for the passengers. This unit is designed to work in combination with the PAC45 system.

1.4 Approval Basis ****NONE****

None. It is the installer's responsibility to determine the applicable approval basis for this installation. This unit is not designed for use in any flight crew situations, and has no effect on any critical aircraft systems. There is no significant weight or electrical load presented to the aircraft.

1.5 Specifications

| | |
|--------------------------------|---|
| Input power: | from main unit |
| Headphone Impedance: | 150-1000 Ω typical |
| Audio Distortion: | <10% @ 35 mW into 150 Ω load |
| Aircraft Radio Impedance: | 1000 Ω typical |
| 3 dB Mic Frequency Response: | 350 Hz — 6000 Hz |
| 3 dB Music Frequency Response: | 200 Hz to 15 kHz |
| Unit weight: | 7.2 Ounces (0.20 kg) |
| Dimensions: | 1.25" H x 3.00" W x 5.50" D (3.2 x 6.6 x 14 cm) |

1.6 Equipment required but not supplied

- A. Headphones, 150 Ω stereo, up to six as required
- B. Microphones, up to six, as required
- C. Interconnect wiring
- D. Intercom, PAC24, or PMA7000, primary unit
- E. Headphone and microphone jacks (up to 6, as required)

Section II – Installation

2.1 General Information

The **IntelliPAX** comes with all necessary hardware for a typical installation. The unit is installed either in the panel (11606, 11616, 11626) or mounted blindly (11606R, 11616R, 11626R, 11636R or 11645). If panel mounted, it can be installed near the main unit, or near the passengers. If blind mounted, it can be mounted nearly anywhere. The 11606R and 11616R volume control for the passengers is factory set for a balanced output, but can be field adjusted through the holes in the side of the unit.

Installation of the **IntelliPAX**, using the available wiring and hardware supplied, does not require special tools or knowledge other than described in 14 CFR 65.81(b) and FAA Advisory Circular 43.13-2B

It is the installer's responsibility to determine the approval basis for this installation. An FAA Form 337, or other approval may be required. See Appendix B for example of FAA Form 337.

2.2 Unpacking and preliminary inspection

The **IntelliPAX** was carefully inspected mechanically and thoroughly tested electronically before shipment. It should be free of electrical or cosmetic defect.

Upon receipt, verify that the parts kit includes the following:

250-250-0001 IntelliPAX Remote Mount Installation Kit

| | | 250-250-0001 |
|--------------|------------------------------|--------------|
| Part Number | Description | 11645R |
| 475-442-0002 | #4-40 Machine screws, black | |
| 625-003-0001 | Soft Touch Knob “D” shaft | |
| 575-250-0001 | IntelliPAX Faceplate | |
| 425-025-0009 | 25 pin Sub-D connector shell | 1 |
| 425-020-5089 | Male Crimp Pins | 25 |
| 625-025-0001 | Connector hood | 1 |
| 475-002-0002 | Connector Thumbscrews | 2 |

2.3 Equipment installation procedures

Blind mounting: (11645R)

1. Install the unit on an avionics shelf or other appropriate structure.
2. If desired, the volume can be adjusted at installation, there are two holes in the side of the unit, one for left, and another for right channel.
3. If desired, a remote switch (not included) can be installed to override the SoftMute™ function. This should be located convenient to the passengers.

2.4 Cable harness wiring

To complete the installation, a wire harness must be made as shown in Appendix C. PS Engineering can make a custom-tailored wiring harness for the installer. All harnesses use Mil-spec quality components with professional techniques, and are fully tested before shipment. Contact PS Engineering for more information. The IntelliPAX connects to the main unit through a 4- or 5-conductor, shielded cable.

2.4.1 Electrical Noise Issues

WARNING: You must use separate shielded cables for the microphone and headphone jacks. Combining these two wires **WILL** cause loud oscillations and degrade the intercom function. The oscillation is caused by the cross-coupling between the large headphone signal and the small microphone signal. The resulting feedback is a high-pitched squeal that varies with the volume controls.

Shielding can protect the system from radiated noise (rotating beacon, power supplies, etc.). However, installation combinations occur where minor interference is possible. The **IntelliPAX** was designed in an interference -protected chassis and has internal filter capacitors on all input lines.

Ground loop noise occurs when there are two different return paths for the same signal, such as airframe and ground return wire. Large cyclic loads such as strobes, inverters, etc., can inject audible signals onto the airframe return path. Follow the wiring diagram very carefully to help insure a minimum of ground loop potential. Radiated signals can be a factor when low level mic signals are bundled with current carrying power wires. Keep these cables separated.

Insulating washers are **required** on all mic and headphone jacks to isolate them from aircraft ground.

2.4.2 Power Requirements

The **IntelliPAX** was designed to work with the main intercom unit. No other power is required.

The Stand Alone unit is connected to a 1A breaker to the avionics bus (2A for dual).

2.4.3 Interconnection with main unit

Interface between the IntelliPAX and the main intercom is through a 4-wire shielded cable.

| Function | IntelliPAX | PAC45 HUB45 | |
|------------------|------------|-------------|--|
| Expansion Power | 1 | A/C | |
| Expansion Ground | 14 | A/C | |
| Audio Input (rt) | 2 | | |
| Audio Input (lt) | 15 | | |
| Audio Output | 3 | J451-29 | |

2.4.4 Auxiliary Inputs

An entertainment device can be connected to the **IntelliPAX**. Install a 1/8" music jack convenient to the passengers to connect the stereo entertainment device into the system. A "Soft Mute" system is installed in the **IntelliPAX** that will mute the music during conversation on the local intercom. Radio traffic or conversation on the main intercom will not mute the music.

A second, monaural input is provided for other purposes, such as public address cabin briefing, or providing radio interface for cases where the intercom does not have radio on the expansion bus (PM1000D for example).

PS Engineering, Inc.
IntelliPAX Expansion Unit

A soft mute inhibit switch (not included) can be installed between IntelliPAX connector pins 12 and 24. Closing this switch places the IntelliPAX into Karaoke mode.

WARNING: Local oscillators and other internal signals from CD or radio equipment can cause undesired interference with VHF navigation and communication equipment. Before takeoff, operate the entertainment device to determine if there is any adverse effect on aircraft systems. If any unusual operation is noted in flight, immediately switch the entertainment device off.

2.5 Post Installation Checkout

After wiring is complete, verify power is ONLY on pin 1 of the connector, and ground on pin 14 (with main unit operating). Failure to do so will cause serious internal damage and void PS Engineering's warranty. With all units plugged in and operating, verify that all active stations can communicate on the intercom, and that any music sources are present, and the SoftMute inhibit control operates correctly (if installed).

Section III – OPERATION

3.1 Power

Switching on the intercom or audio panel automatically activates the IntelliPAX unit. The Stand Alone unit is active when power is applied to the Avionics Bus.

3.2 Adjusting the Volume

The Remote (11645) version has a service adjustable volume, which is accessible through a pair of openings on the side of the unit. These are 20-turn potentiometers, so may require many turns to make a difference. The volume is set to maximum at the factory. Users can reduce the volume at individual stereo headsets.

3.3 IntelliVox® Squelch

No adjustment of the *IntelliVox*® squelch control is required or possible. Through independent processors on each microphone, the ambient noise appearing in all microphones is constantly being sampled. Non-voice signals are blocked. When someone speaks, only their microphone circuit opens, placing their voice on the intercom.

For best performance, the headset microphone **must** be placed within ¼ inch of your lips, preferably against them. It is also a good idea to keep the microphone out of a direct wind path. Moving your head through a vent air stream may cause the *IntelliVox*® to open momentarily. This is normal.

PS Engineering, Inc. recommends installation of a Microphone Muff Kit from Oregon Aero (1-800-888-6910). This will optimize *IntelliVox*® performance.

3.4 Music Mute

If a remote switch is installed between pins 12 and 24, the “SoftMute” will be enabled. When the switch is closed, the music will mute whenever there is intercom conversation in the IntelliPAX. Audio coming from the main unit, such as radio or intercom, will not mute the IntelliPAX music.

Opening the switch places the unit music, “Karaoke Mode,” and music muting is inhibited.

For the 11606 and PMA7000-Series, intercom audio in the expansion unit *will not* mute music in the audio panel.

Section IV Warranty and Service

4.1 Warranty

In order for the factory warranty to be valid, the installations in a certified aircraft must be accomplished by a FAA- certified avionics shop and authorized PS Engineering dealer. If the unit is being installed by a non-certified individual in an experimental aircraft, a dealer-made harness must be used for the warranty to be valid.

PS Engineering, Inc. warrants this product to be free from defect in material and workmanship for a period of one year from the date of sale. During this one-year warranty period, PS Engineering, Inc., at its option, will send a replacement unit at our expense if the unit should be determined to be defective after consultation with a factory technician.

This warranty is not transferable. Any implied warranties expire at the expiration date of this warranty. PS Engineering SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. This warranty does not cover a defect that has resulted from improper or unreasonable use or maintenance as determined by us. This warranty is void if there is any attempt to disassemble this product without factory authorization. This warranty gives you specific legal rights, and you may also have other rights that may vary from state to state. Some states do not allow the exclusion of limitation of incidental or consequential damages, so the above limitation or exclusions may not apply to you.

4.2 Factory Service

The **IntelliPAX** is covered by a one-year limited warranty. See warranty information.

Contact PS Engineering, Inc. at (865) 988-9800 or www.ps-engineering.com/support.shtml before you return the unit. This will allow the service technician to provide any other suggestions for identifying the problem and recommend possible solutions.

After discussing the problem with the technician and you obtain a Return Authorization Number, ship product via an approved carrier (do not ship U.S. Mail) to:

PS Engineering, Inc.
Customer Service Department
9800 Martel Road
Lenoir City, TN 37772
(865) 988-9800 FAX (865) 988-6619

Appendix A Instructions for FAA Form 337 and Airworthiness

5.1 Sample text for FAA Form 337

One method of airworthiness approval is through an FAA Form 337, *Major Repair and Alteration (Airframe, Powerplant, Propeller, or Appliance)* In the case of the IntelliPAX part number 116(), you may use the following text as a guide.

Installed intercom expansion unit, PS Engineering IntelliPAX, part number 11616 in (location) at station _____. Installed per AC43.13-2B, Chapter 2, Installed per PS Engineering *Installation Operators Manual* p/n 200-250-xxxx, revision X, dated ().


Interface to existing audio system in accordance with installation manual and in compliance with practices listed in AC43.13-2B, Chapter 2. All wires are Mil-Spec 22759 or 27500. No connection to the aircraft dimmer bus is required. No additional connection to aircraft power is made.

Aircraft equipment list, weight and balance amended. Compass compensation checked. A copy of the operation instructions, contained in PS Engineering document 200-250-(), revision (), Dated (), is placed in the aircraft records. All work accomplished listed on Work Order_____.

5.2 Instructions for Continued Airworthiness:

| Section | Item | Information |
|---------|-------------------------------------|---|
| 1 | Introduction | Installation of passenger intercommunications system. |
| 2 | Description | Installation as described in manufacturer's installation manual referenced on FAA Form 337, including interface with other avionics audio as required. |
| 3 | Controls | See installation and operator's guide referenced on FAA Form 337. |
| 4 | Servicing | None Required |
| 5 | Maintenance Instructions | On Condition, no special instructions |
| 6 | Troubleshooting | In the event of a unit problem, place the main unit into "OFF," the fail-safe mode. This allows normal pilot communications using COM 1. Follow checkout instructions in the installation manual referenced on the FAA Form 337. For a specific unit fault, contact the manufacturer at (865) 988-9800 for special instructions. |
| 7 | Removal and replacement information | <u>Removal:</u> Remove Volume knob (if equipped (11606, 11616), 2 ea. then #4-40 black machine screws mounting the unit. Remove unit from behind panel. Place metal faceplate in a safe area. <u>Installation:</u> Align the volume knob shaft (if equipped, 11606, 11616) and the mounting holes with the panel and front plate. Secure using 2 ea. #4-40 black screws, provided. |
| 8 | Diagrams | Not applicable |
| 9 | Special Inspection Requirements | Not Applicable |
| 10 | Protective Treatments | Not Applicable |
| 11 | Structural Data | Not Applicable |
| 12 | Special Tools | None |
| 13 | Not Applicable | Not Applicable |
| 14 | Recommended Overhaul Periods | None |
| 15 | Airworthiness Limitations | Not Applicable |
| 16 | Revision | To be determined by installer |

Appendix B Installation

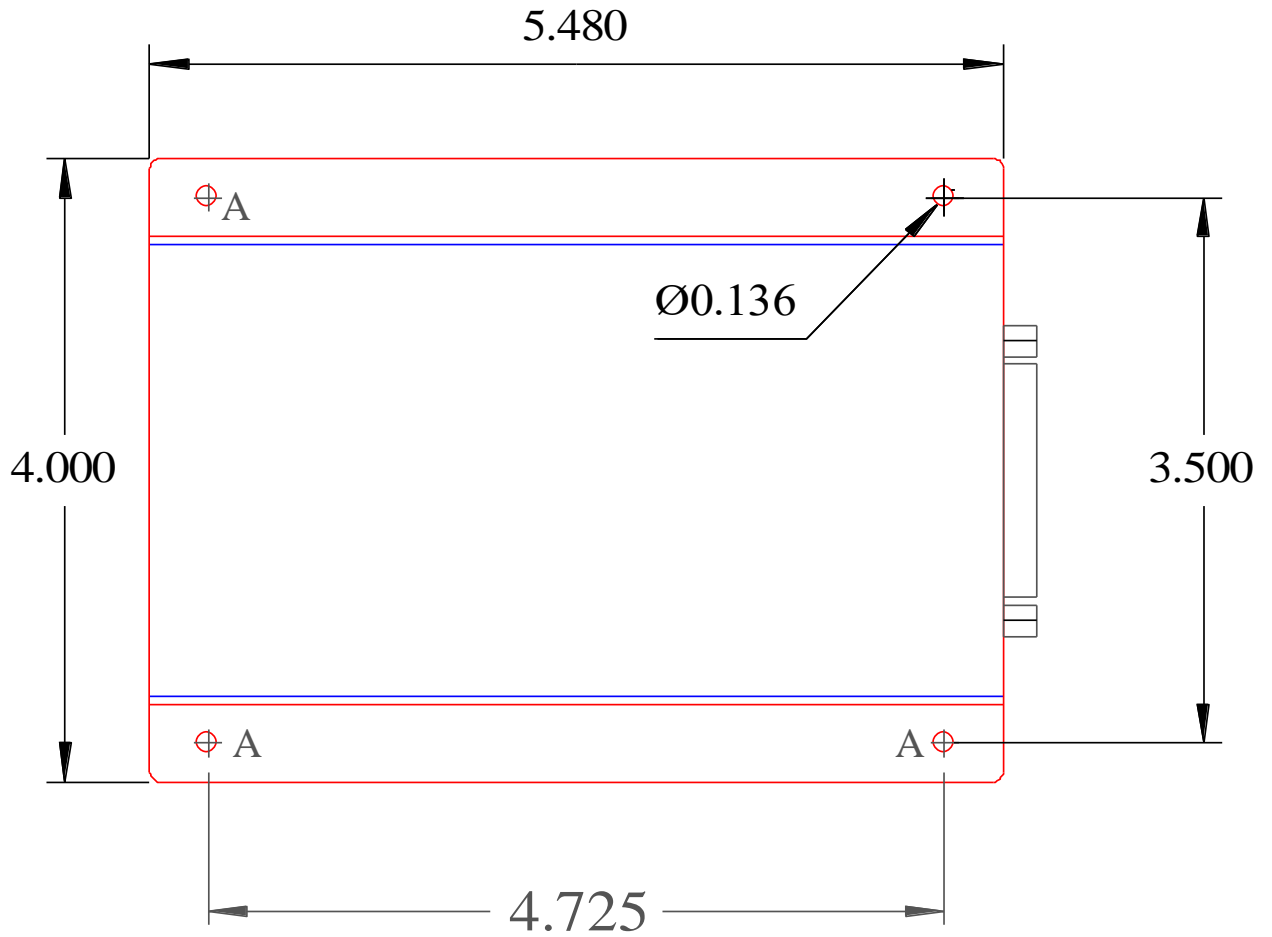

Appendix C Wiring Information

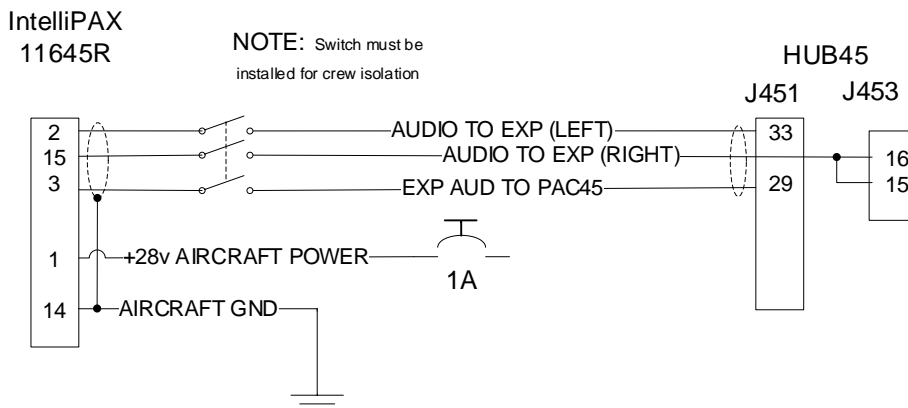


Figure 1 PAC45 system Interface